

AFM - HW - LED Indicator

LED Indicator

Following LED indicators exists on AirID FIDO Mini

Color	Mode	Meaning
red	Static	on during battery charging; off when battery charging is done
blue	Static	on during bluetooth communication activities
blue	Blinking	ongoing FIDO communication - User Presence, waiting for input