

__A2/A2M - SW - Setup: AirID Autolock Distance

The distance to the device for the auto-lock can be configured with the „Distance Sensor“ feature on the AirID. The automatic lock depends on the host device and its operating system and must be activated separately, if required.

For configuration of this feature, an active BLE connection is required:

1. Activate the „Distance Sensor“ on the AirID device (Settings > Security > Distance Sensor)
2. You can select a preset value (near, mid, far) or a manual setting.

Please note that the measured distance may vary depending on the environment/line of sight. To reduce interference, we recommend for manual setting a distance of min. three meters.